


# Pineapple

## Underground Stemming Plugs

### Instructions 64mm prototype

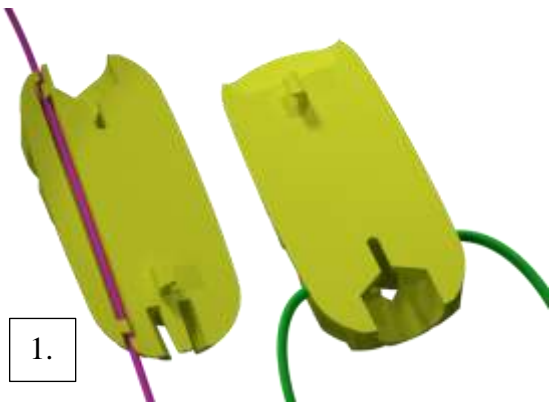

1.


leads are not tangled if the plug is rotated.

Open the two halves by sliding and insert the detonator lead/s into the channel behind the tabs as shown in (1), these will keep them in place. Slide the two halves back together ensuring the lead/s remain in the channel. The plug will self-centre on the rails.

Insert the threaded charge hose end (or installer pipe) firmly onto the central spike at the retraction loop end (2). Ensure the detonator



2.

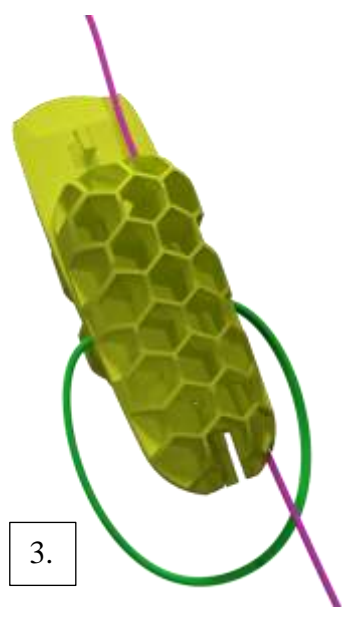

3.

**IMPORTANT** - The plug is not made to hold up emulsion. Pushing it until it stops and embedding it in emulsion will prevent it working.

Plan where best to locate the plug, ideally 1-2m short of degassed emulsion, or 0.5-1m short of the Anfo column. Push in to the collar, hold the detonator leads and push the plug in with the hose. Then retract the charge hose or installer at the planned location. This disconnects the hose from the plug and locks out the Pineapple firmly, shown in (3). It is now positioned for firing.

If you do need to pull the plug out for a misfire, use the retraction hook provided shown in (4). Use it to hook on to the green loop and withdraw the plug. After retraction, the plug can be installed again by following the same installation process.



4.

Please Contact-Us through our website at:  
<https://www.underground-stemming.com/contact-us>

